


Floating Foil Board Installation


It is your responsibility to carry out the correct Health & Safety procedures and use the correct PPE for each task carried out

1. Before the system is installed, ensure the floor level is totally free of debris and must be a level surface. If the floor is not level a self levelling compound must be used prior to installation.

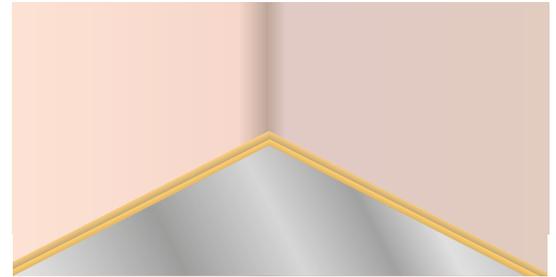


2. Fix a 25mm batten around the perimeter of the room.

3. Starting from the corner of the room, lay the foiled insulation panels covering the whole floor. In areas where there will be no underfloor heating pipework, use regular insulation of the same thickness. Tape the joints with a foil tape.

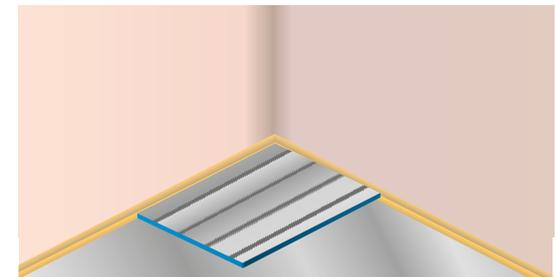

4. Start to lay the pipework into the preformed Foil Board using the HydroHeat CAD Design. Each insulation board will have pre-formed bend to allow for the return pipework.

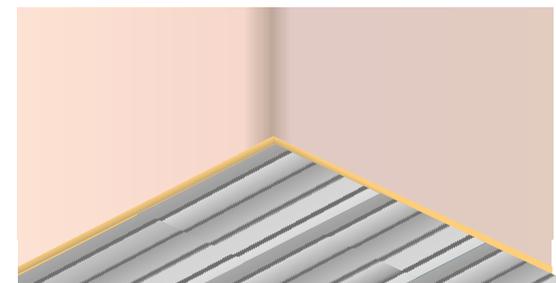

5. Once the pipework has been laid, check the pipework for kinks, damage and fill the system, pressure testing upon completion.

